



FOR WIRING THE 720-MDO AS A 720-MD, CONNECT THE POWER CABLES (ORANGE & WHITE) AS SHOWN BELOW

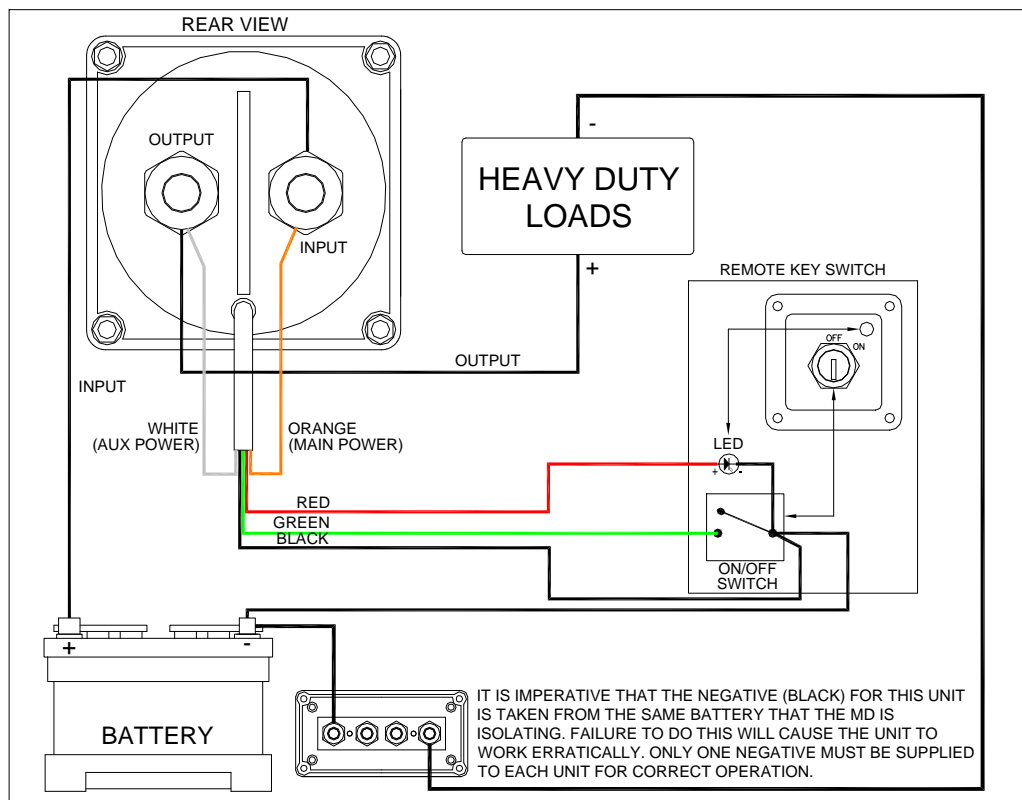

INST-MDO-INSERT

FOR WIRING THE 720-MDO AS A 720-MD, CONNECT THE POWER CABLES (ORANGE & WHITE) AS SHOWN BELOW

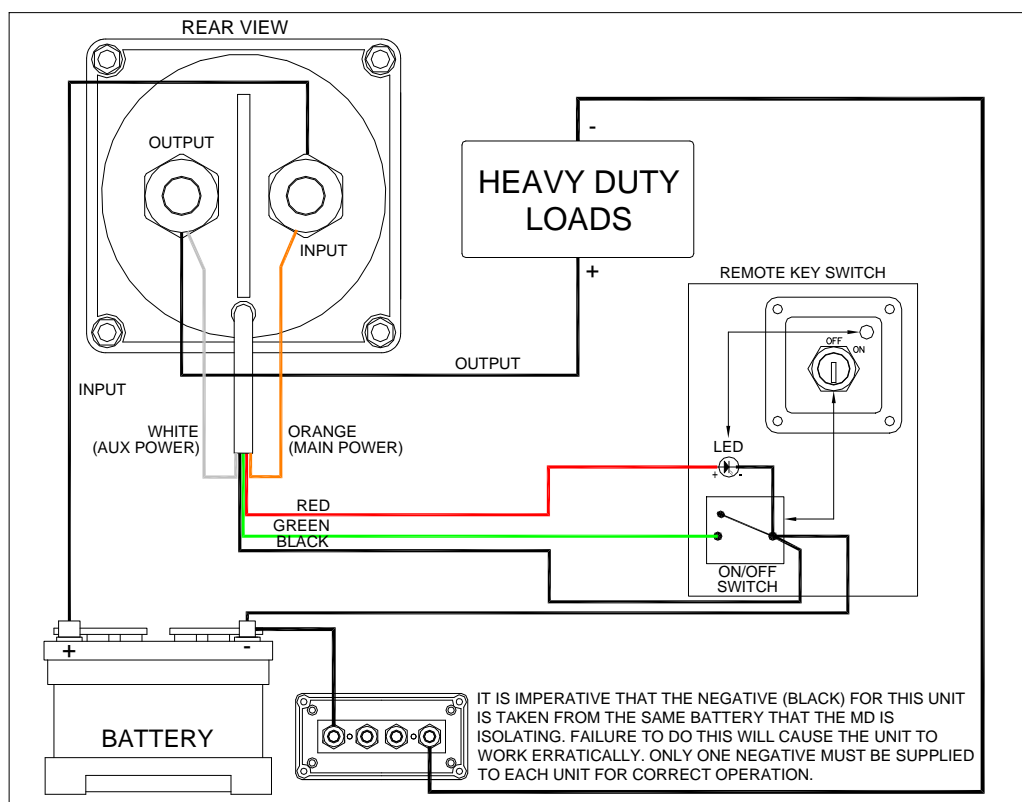

INST-MDO-INSERT